


The sketches contained in this document are for illustrative purposes only. They are intended to represent the component but may not be shown to scale. The various models may be different than shown, depending upon options chosen or the particular configuration of a unit.

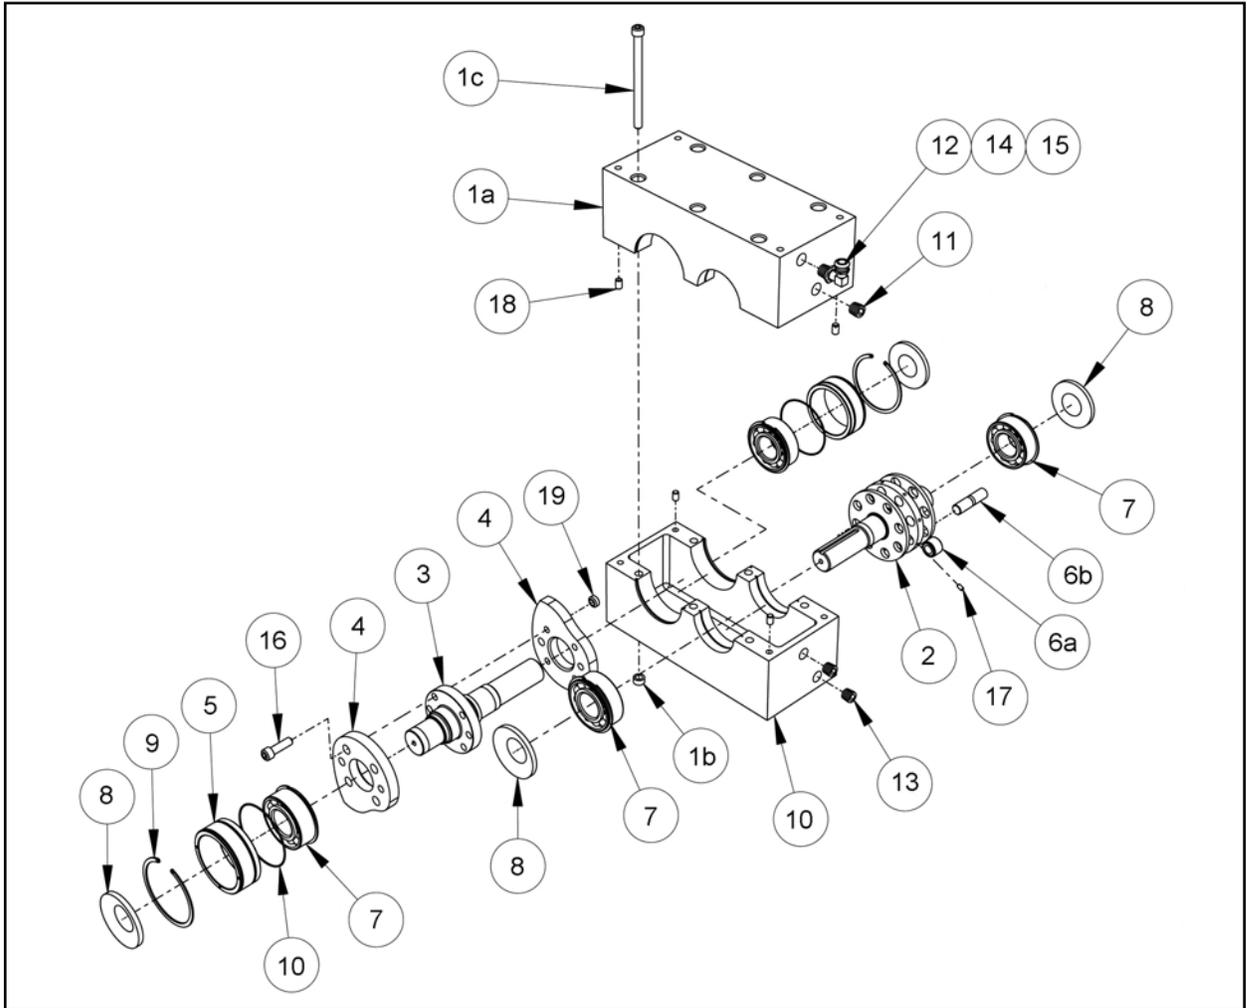

### ParaDex Parts List

- |  |                                |                                    |
|--|--------------------------------|------------------------------------|
| 1. Housing                             | 6a. Cam Follower Bearing       | 13. Pipe Plug (2)                  |
| 1a. Housing Halves                     | 6b. Cam Follower Stud          | 14. Adapter                        |
| 1b. Threaded Inserts – Nutsert         | 7. Double Row Ball Bearing (4) | 15. 90° Street Ell                 |
| 1c. Socket Head Cap Screw<br>(5" Long) | 8. Shaft Seals (4)             | 16. Socket Head Cap Screw<br>(Cam) |
| 2. Output Shaft                        | 9. Snap Ring (2)               | 17. Set Screw                      |
| 3. Cam Shaft                           | 10. "O" Ring (2)               | 18. Dowel Pin                      |
| 4. Cams                                | 11. Oil Gage                   | 19. Threaded Insert - Nutsert      |
| 5. Eccentric Bushings (2)              | 12. Vent                       |                                    |

## 1.6.2 Lubricating Facilities and Installation Positions, Series 40P- 130P

**Bottom face D or F**

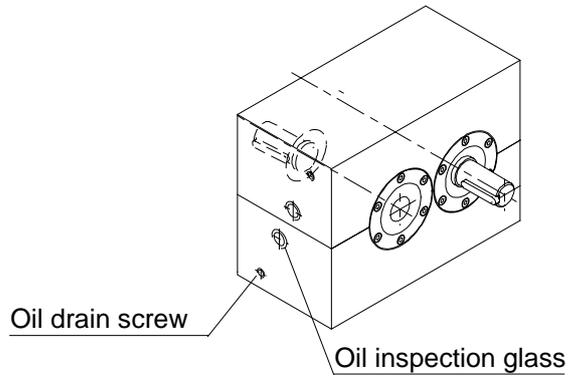


Fig. 7

**Bottom face C or E**

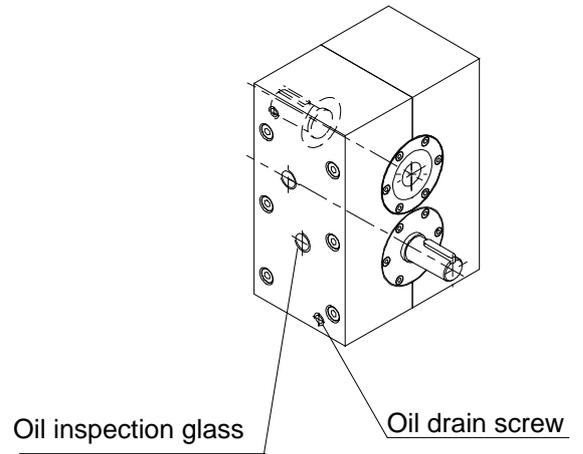


Fig. 8

**Bottom face A or B**

Face with oil holes corresponding to order

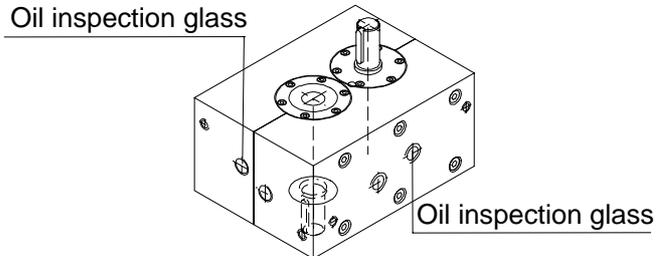


Fig. 9

**Permanent lubrication**

Installation position arbitrary

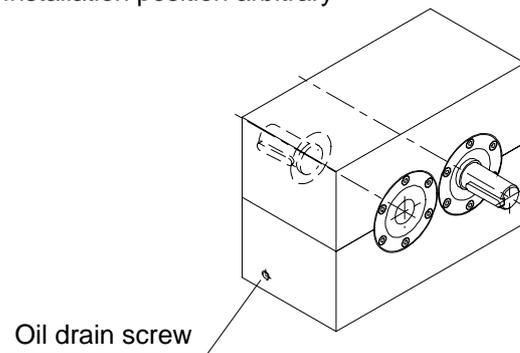


Fig. 10