


## 1.5.4 Installation positions

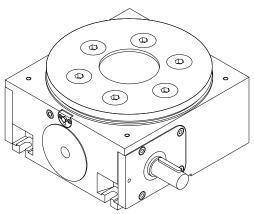


Surface A
Figure 10

Figure 12

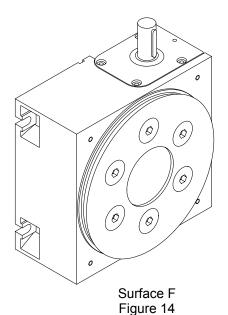

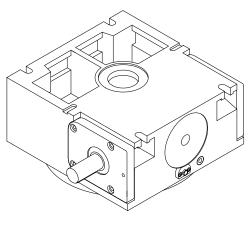


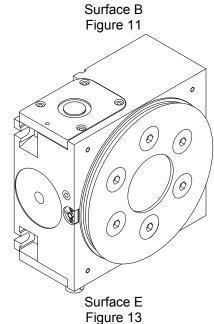


Attention: In installation positions

A; E and F, surfaces
must be set back

## **Versions**

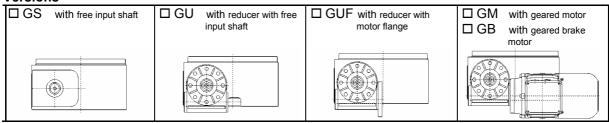

## Central tube models

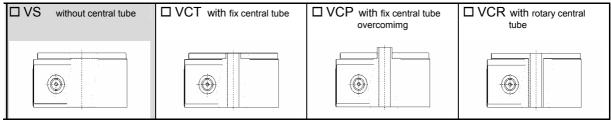

## Mounting position of reducer

